www.swisherinc.com

OWNER'S MANUAL

MODEL NO.

23303

23087



PORTABLE FIRE PIT

- **Warranty Details**
- **Safety Precautions**
- **Parts List**
- **Assembly Instructions**

IMPORTANT

Read and follow all Safety Precautions and Instructions before using this product.

SWISHER®

10/31/2022

SWISHER ACQUISITION INC.
1602 CORPORATE DRIVE, WARRENSBURG, MISSOURI 64093
PHONE (660) 747-8183 FAX (660) 747-8650

Made In The USA

23321 REV 22-294

LIMITED WARRANTY

The manufacturer's warranty to the original consumer purchaser is: This product is free from defects in materials and workmanship for the period's shown below beginning from the date of purchase by the original consumer purchaser. We will repair or replace, at our discretion, parts found to be defective due to materials or workmanship. This warranty is subject to the following limitations and exclusions:

1) Consumer Use This product has a 90 day Limited Consumer warranty from the date of purchase.

2) Limitation This warranty applies only to products, which have been properly assembled, adjusted, and operated in accordance with the instructions contained within this manual. This warranty does not apply to any product of Swisher that has been subject to alteration, misuse, abuse, improper assembly or installation, shipping damage, or to normal wear of the product.

3) Exclusions Excluded from this warranty are normal wear, normal adjustments, and normal maintenance.

Should you have any questions concerning this warranty, please contact us toll-free at 1-800-222-8183.

THIS WARRANTY DOES NOT APPLY TO ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR ALL EXPRESSED WARRANTIES. Some states do not allow the limitation of consequential damages or limitations on how long an implied warranty may last, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state-to-state. This is a limited warranty as defined by the Magnuson-Moss Act of 1975.

SAFETY PRECAUTIONS

Thank you for choosing Swisher's Portable Fire Pit. Before using your Fire Pit, please read, understand and follow all of the safety precautions and other instructions explained in this manual.



This Safety Alert Symbol indicates important messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury or loss/damage to property.

Read this manual completely. Failure to observe the following safety instructions could result in serious injury or death.

- Read the manual. Learn to use this Fire Pit safely.
- Allow only responsible adults to use the Fire Pit or create a fire. **Never allow children to assemble or use this Fire Pit.**
- ***Never assume that children will remain where you last saw them.*** Keep children under the watchful care of another responsible adult.
- **Do not stand, sit or get inside of Fire Pit!**
- Do not touch the Fire Pit when a Fire is burning as the steel will become very hot. Always allow to completely cool before touching the Fire Pit.
- Do not use the Fire Pit or build a Fire while under the influence of alcohol or drugs.
- This Fire Pit is for **Outdoor use only**. It shall NOT be used in any structures or enclosed areas.
- Do not use this Outdoor Fire Pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
- Do not use the Fire Pit on a boat or any other vehicle.
- Always use in accordance with any applicable local, state, and national codes. Contact your local Fire Department for information on safe and legal burning practices.
- This Fire Pit is designed for burning wood only. Hardwood is recommended as it burns cleaner. Avoid soft wood if possible as it may throw sparks while burning.
- Do NOT burn anything besides real wood logs.
- Do NOT alter this Fire Pit in any way.
- Do NOT store or use Gasoline or other flammable liquids or vapors in the vicinity of this Fire Pit.
- Do NOT store or use LP gas within 20 ft of this Fire Pit when in operation.
- Do NOT use this Fire Pit near any automobiles or vehicles .
- Do NOT use in an explosive atmosphere. Keep the Fire Pit and surrounding areas clean and clear of debris, combustible materials, and combustible liquids.
- Do NOT use this Fire Pit under a combustible cover such as overhanging trees, canopies, covered porches, awnings, bushes, etc.
- ALWAYS place Fire Pit on a hard, level Non-Combustible Surface. This may include concrete, rock or stone.
- ALWAYS keep Fire Pit a safe distance from any combustible material and/or structure.
- Do NOT use the Fire Pit on a combustible Surface such as wooden decks or dry grass.
- Do NOT use in Windy Conditions.

Notes:

1. Your Fire Pit is unfinished steel. Discoloration from heat and surface rusting can occur.
2. Always store in a dry location.
3. Do not use water to extinguish a flame, except in an emergency, as this could damage the fire pit. Allow the fire to burn itself out.

PARTS

Use care when unpacking.


BOX CONTENTS: PART NUMBERS MAY VARY BY MODEL NUMBER

MODEL 23303 – EAGLE			
Item Number	Part Number	Description	Quantity
1	23069	PLATE - FIREBOX, SIDE PLATE, FLAG	2
2	23304	PLATE - FIREBOX, END PANEL, EAGLE	2
3	23086	BASE WELDMENT	1

MODEL 23087 – SWISHER			
Item Number	Part Number	Description	Quantity
1	23069	PLATE - FIREBOX, SIDE PLATE, FLAG	2
2	23070	PLATE - FIREBOX, END PANEL, SWISHER	2
3	23086	BASE WELDMENT	1

UNPACKING:

- Verify all components are accounted for that are listed in the Contents List shown above.

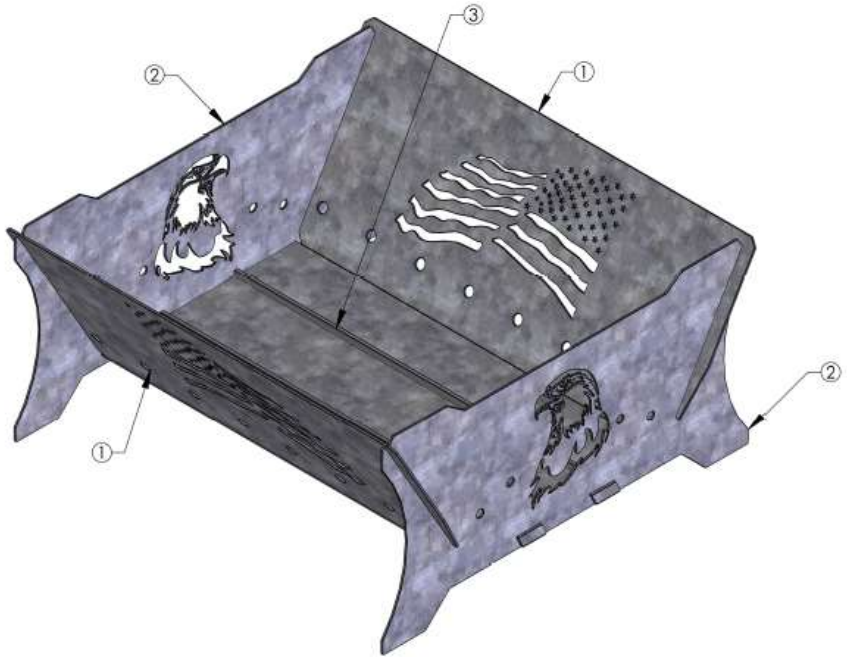

FIRE PIT PARTS SHOWN FULLY ASSEMBLED. (MODEL 23303 SHOWN)

ASSEMBLY

STEP 1:

- Insert tabs on Bottom Plate ③ into slots in Ends Plates ②(See Figure **1-A**). The ribs should face up and the tabs should face down (See **Figure 1**-B).

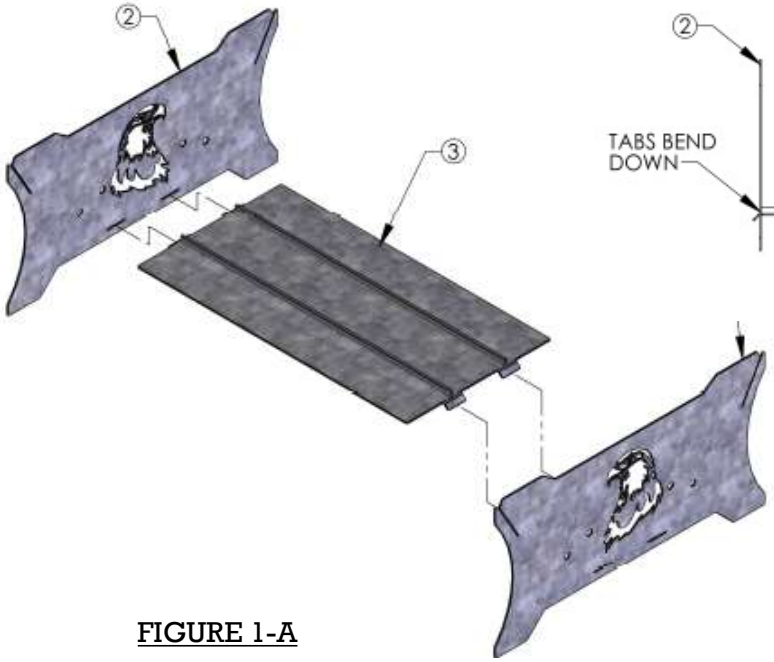


FIGURE 1-A

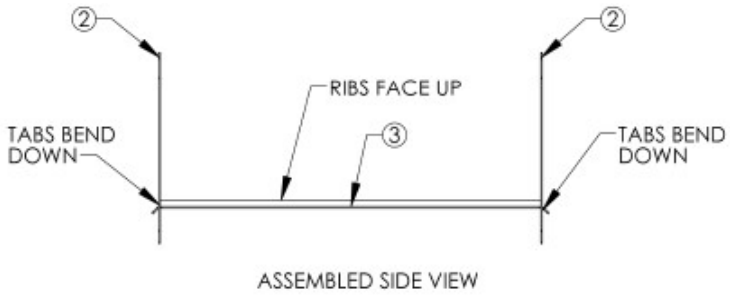


FIGURE 1-B

STEP 2:

- Align the slots on Side Panel ① and the slots on End Panel ② (See FIGURE 2-A). Slide Side Panel ① into End Panels ② (See FIGURE 2-B).
- Slide the panel down until the slots bottom out. Repeat steps for second Side Panel.

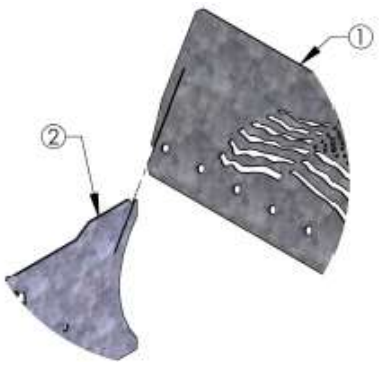


FIGURE 2-A

ENSURE PANELS ARE SECURE BEFORE USE.

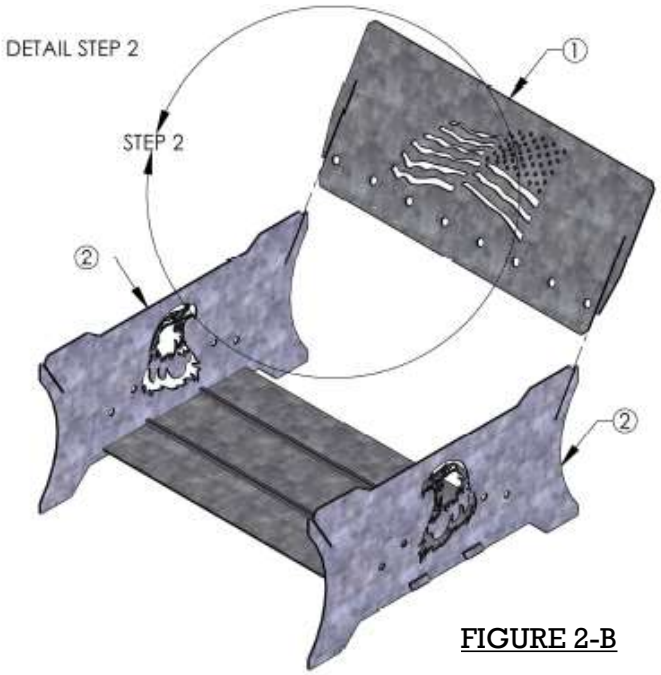


FIGURE 2-B

NOTES

THIS PAGE INTENTIALLY LEFT BLANK

www.swisherinc.com

OWNER'S MANUAL

MODEL NO.
23303
23087

IMPORTANT

Read and follow all Safety Precautions and Instructions before using this product.

Portable Fire Pit

WHEN ORDERING PARTS, PLEASE HAVE THE FOLLOWING INFORMATION AVAILABLE:

* PRODUCT – PORTABLE FIRE PIT
* MODEL NUMBER - _____
* PART NUMBER
* PART DESCRIPTION

TELEPHONE - 1-800-222-8183
FAX - 1-660-747-8650

SWISHER ACQUISITION INC.
1602 CORPORATE DRIVE
WARRENSBURG, MO 64093
www.swisherinc.com

SWISHER®

CHANGING YOUR LANDSCAPE SINCE 1945